
AR91.18-P-1800GH	Remove/install front seat cushion covering	6.3.97

MODEL 163.113 /128 /136 /154 /157 /172 /174 /175

1 Front seat cover
2 Front seat cushion
3 Front seat frame
4 Internal Torx drive bolts (front)
5 Internal Torx drive bolts (rear)
6 Seat adjustment mechanism
7 Plug in clips
8 Velcro closure
9 Wire rings
10 Crosswise stapling

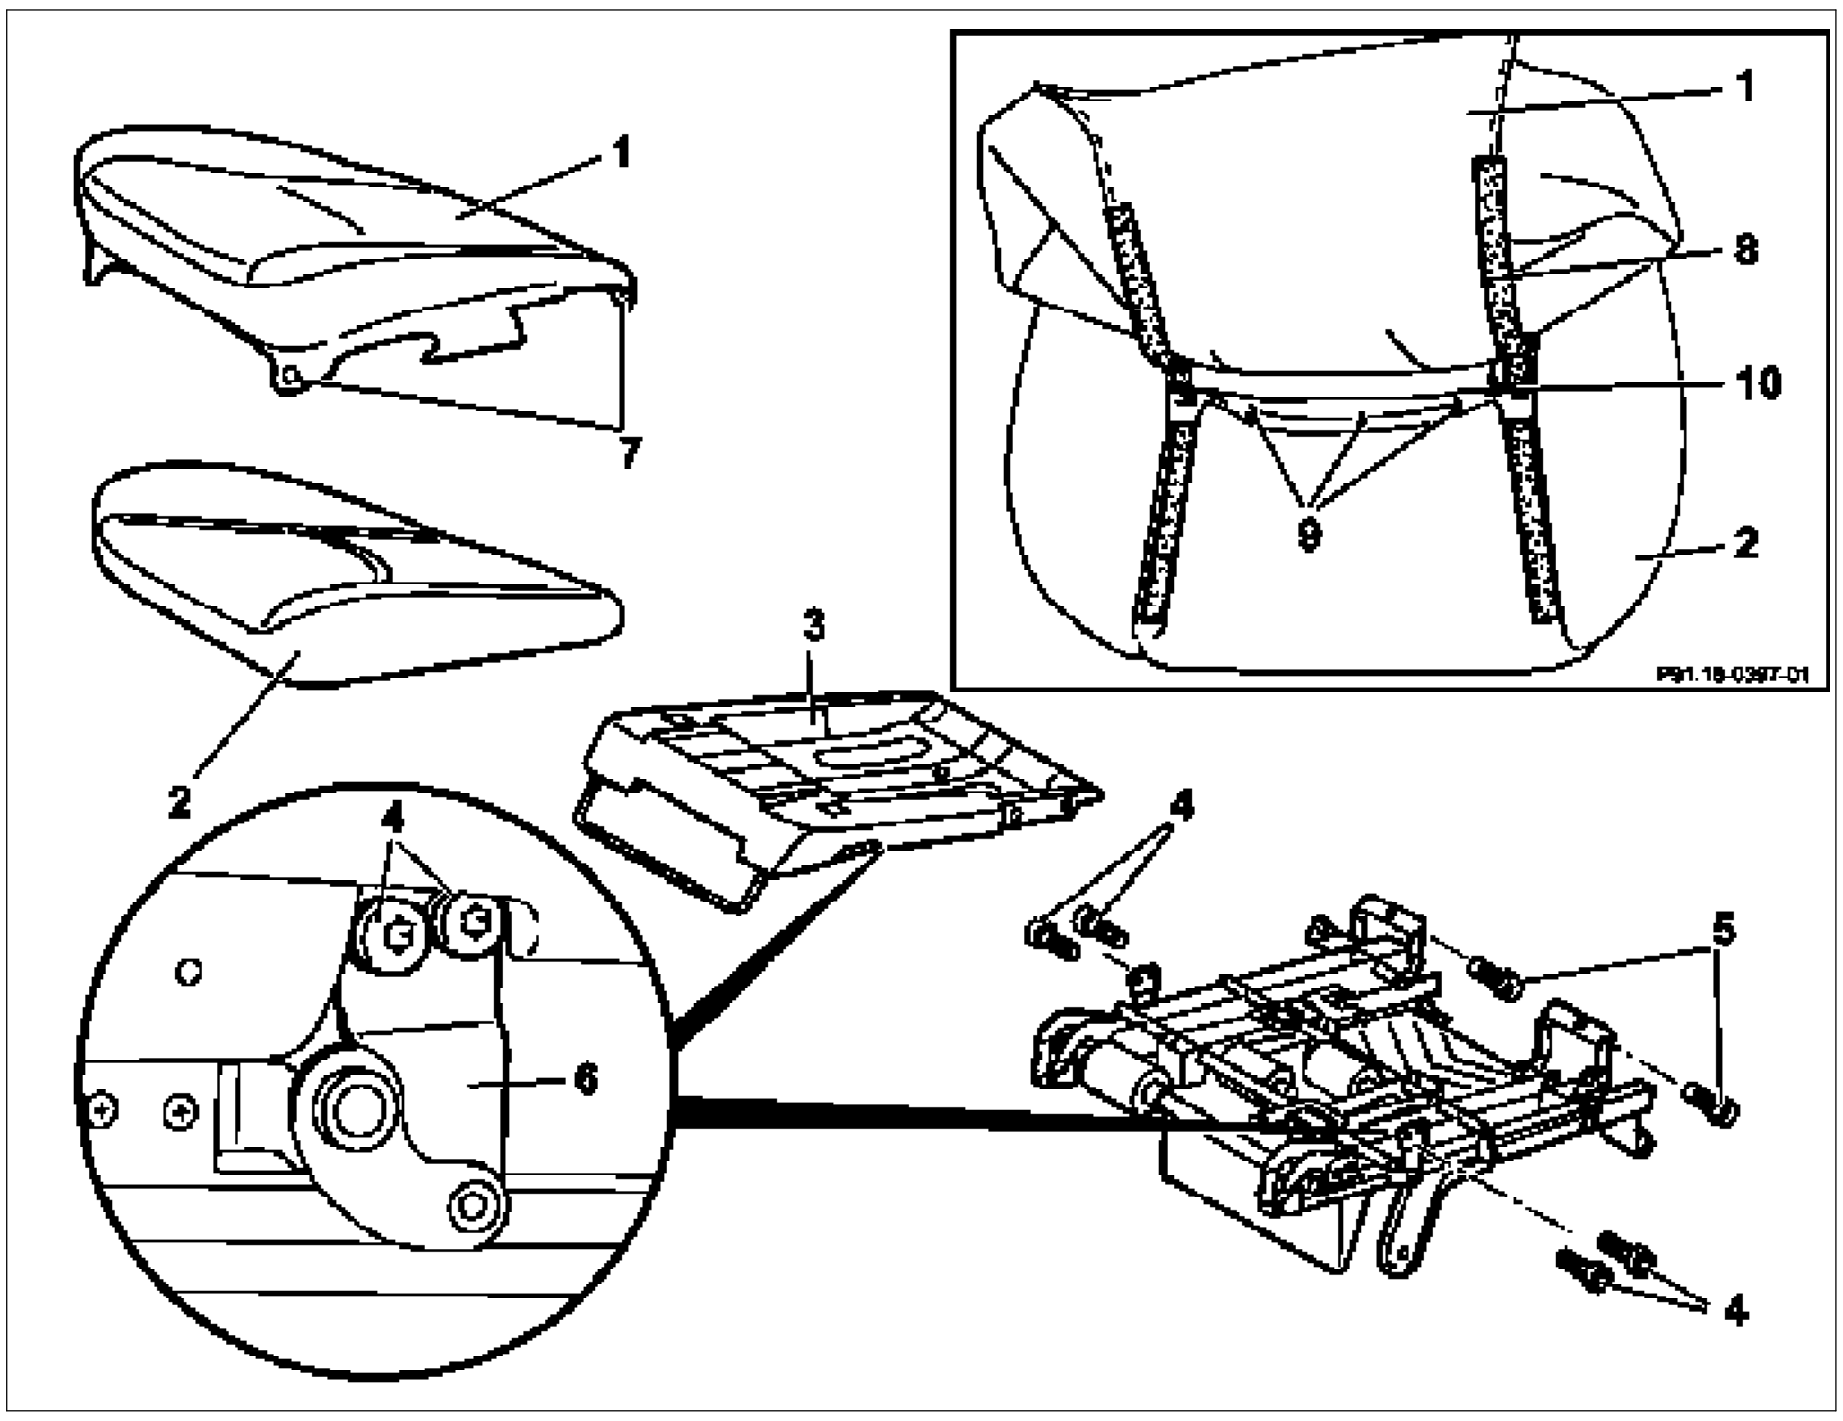

P91.18-0396-06

	Remove/install		
1	Remove front seat backrest		AR91.10-P-1060GH
2	Pull insert rails of front seat cover (1) off front seat frame (3)	ℹ Relieve the load on the front seat cover by pressing down the front seat frame.	
3	Press the plug-in clips (7) of the front seat cover (1) out of the front seat frame (3)		
4	Pull off the Velcro closure (8) from the front seat cover (1) up to the crosswise stapling (10) of the front seat cushion (2)		
5	Bend open the wire rings (9) of the crosswise stapling (10)		
6	Unhook wire for the crosswise stapling (10) on front seat cover (1) from opened wire rings (9)		
7	Pull remaining Velcro closure (8) off the front seat cushion (2)		
8	Remove front seat cover (1) from front seat cushion (2)		
9	Install in the reverse order		